

ASSEMBLY INSTRUCTIONS


 

MODEL : P321 DINING TABLE

Thanks you for purchasing this quality product. Be sure to lay all components on a soft and clean surface before assembly in order to avoid components from being scratched.





CAUTIONS :

1. Check contents against list for quantity.
2. Familiarize yourself with the components and hardware by reviewing the Assembly Instructions.
3. Do not over tightened the screws and bolts as it may damage the threads.
4. Keep all hardware parts out of the reach of children.
5. Please "LIFT UP & MOVE" the table when ever you want to shift it.


PARTS LIST

NO.	DESCRIPTION	QTY
1	TABLE TOP 	1 PC
2	LEG 	2 PCS
3	WOODEN SUPPORT 	3 PCS

 
 
HARDWARE LIST

NO.	DESCRIPTION	QTY
A	JCBB M8 x 30mm 	12 PCS
B	JCBB M8 x 60mm 	4 PCS
C	SPRING WASHER 	16 PCS
D	FLAT WASHER 	16 PCS
E	ALLEN KEY M5 	1 PC
F	WOOD DOWEL 	4 PCS

STEP 1

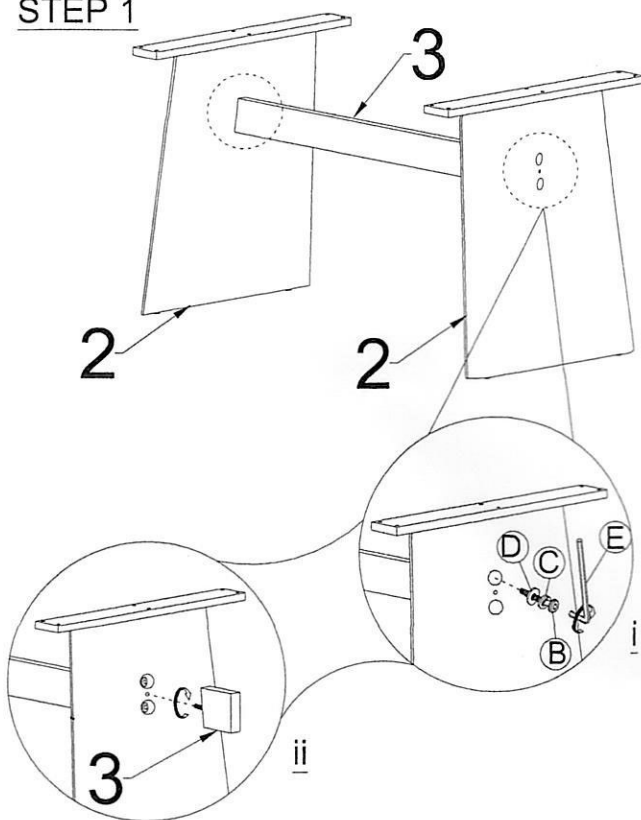

STEP 2

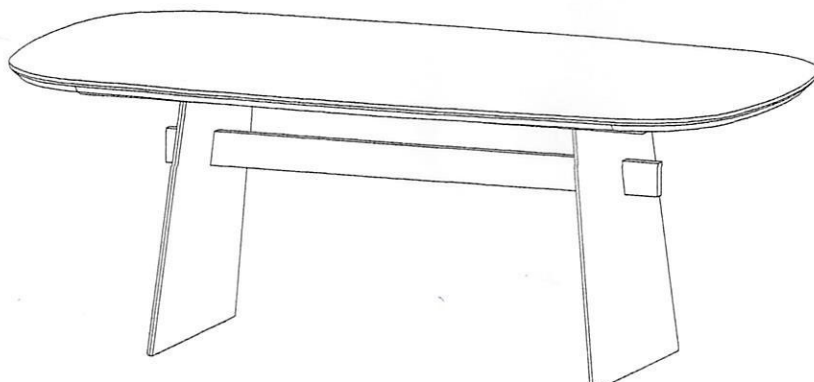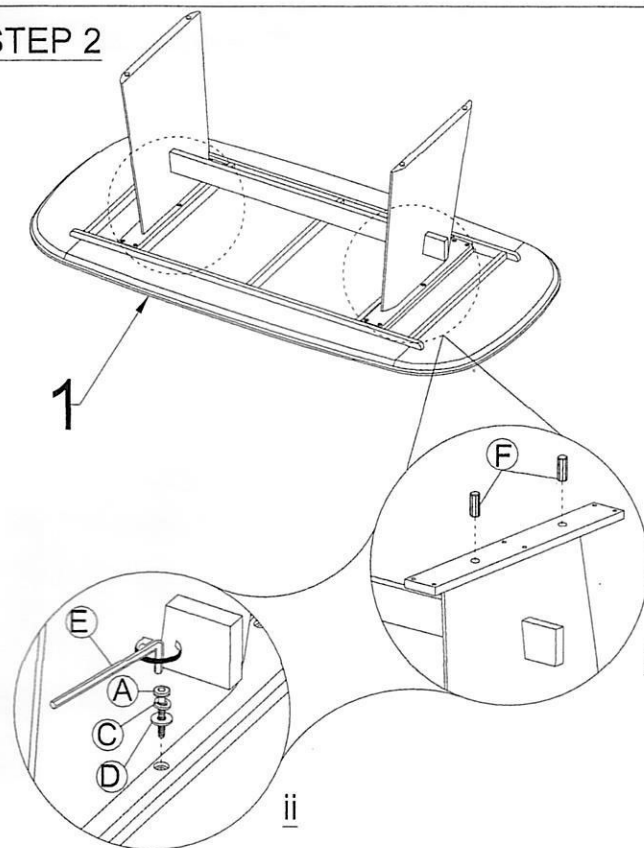

COMPLETED ASSEMBLY