



Assembly Instruction						
CF 9370 (4'6" FULL)		Step 1				
A	Headboard	1pc				
B	Footboard	1pc				
C	Side Rail	2pcs				
D	Side Wing	2pcs				
E	Footboard Side Legs 80 x 35 x 50(H)	2pcs				
F	Center Rail 1910mm	1pc				
G	14 Slit 1397mm	1pc				
H	Support Legs 265mm	3pcs			Step 2	
I	Side Rail Support Legs 266 x 60 x 15mm	4pcs				
J	Footboard Front Panel	1pc				
K	Side Rail Front Panel	2pcs				
(L)	Left Side Panel	3pcs				
(R)	Right Side Panel	3pcs				
M	Footboard Back Panel	1pc				
N	Side Rail Back Panel	2pcs	Step 3			
O	Footboard Bottom Panel	1pc				
P	Side Rail Bottom Panel	2pcs				
Q	Bottom Panel Big Support Wood	7pcs				
S	Bottom Panel Small Support Wood	4pcs				
HARDWARE					Step 4	
1	JCBC M6 x 60	3pcs				
2	JCBC M6 x 50	12pcs				
3	Allen Key 100mm	1pc				
4	Allen Key 70mm	1pc				
5	CSK Screw 16mm	56pcs				
6	CSK Screw 28mm	8pcs				
7	CSK Screw 32mm	64pcs	Step 5			
8	CSK Screw 50mm	24pcs				
9	JCBB M8 x 20	4pcs				
10	Small Adjuster	3pcs				
11	Wood Dowel 20mm	8pcs				
12	Metal Stopper	6pcs				
13	Roller	14pcs				
14	Spring Washers	10pcs				
15	Flat Washers	10pcs				

Assembly Instruction


Step 6

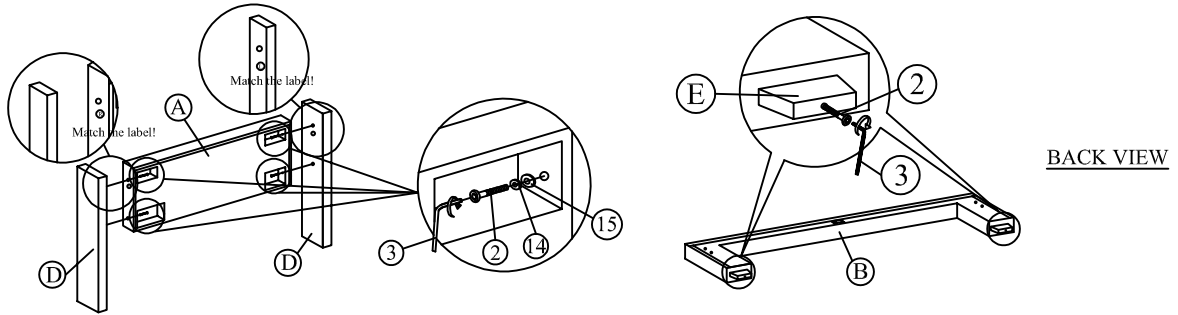


Step 7

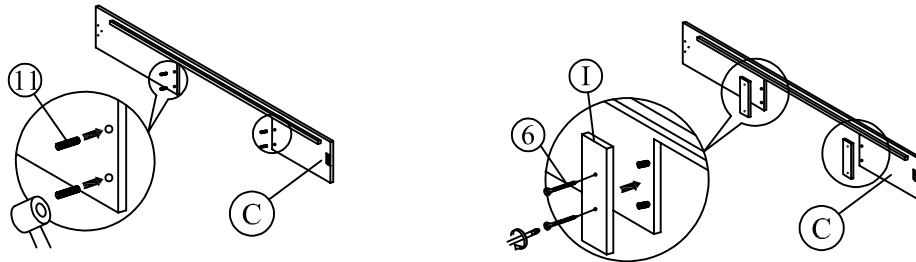

Step 8

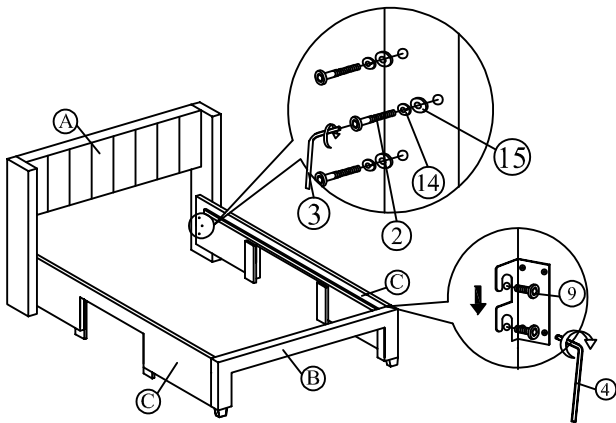

Step 9

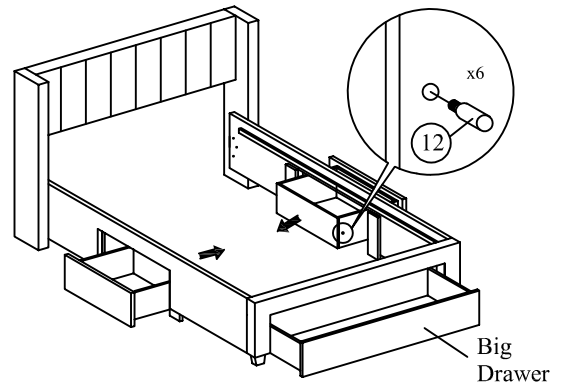

Step 10

