





















Model : CF 9260-C (5'6")

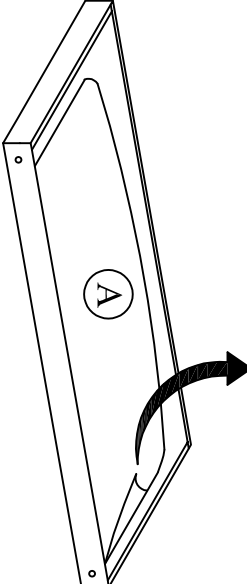
Assembly Instruction

<div>A</div> <div></div> <div>Headboard</div> <div>1pc</div>	<div>Step 1 : Unzip the black non-woven fabric on the back of headboard and take out all the parts out.</div>	
<div>B</div> <div></div> <div>Footboard</div> <div>1pc</div>	<div></div> <div>Attention: Zip the black non-woven fabric after take out the parts !:</div> <div><u>BACK VIEW</u></div>	
<div>C</div> <div></div> <div>Side Rail</div> <div>4pcs</div>		
<div>D</div> <div></div> <div>Footboard Legs</div> <div>4pcs</div>		
<div>E</div> <div></div> <div>Side Rail Legs</div> <div>2pcs</div>	<div>Step 2 : Fix the footboard (B) with legs (D) as shown.</div>	
<div>F</div> <div></div> <div>Center Rail</div> <div>2pcs</div>		
<div>G</div> <div></div> <div>14 pcs Slat</div> <div>2pcs</div>		
<div>H</div> <div></div> <div>Support Legs</div> <div>4pcs</div>		
<div>I</div> <div></div> <div>JCBB M8 x 20</div> <div>8pcs</div>	<div>Step 3 : Attach the JCBB Bolt (I) to the headboard (A) and footboard (B).</div>	
<div>J</div> <div></div> <div>JCBC M6 x 30</div> <div>8pcs</div>		
<div>K</div> <div></div> <div>JCBC M6 x 60</div> <div>4pcs</div>		
<div>L</div> <div></div> <div>Allen Key 65mm</div> <div>1pc</div>		
<div>M</div> <div></div> <div>Allen Key 70mm</div> <div>1pc</div>	<div></div> <div><u>FRONT VIEW</u></div>	
<div>N</div> <div></div> <div>CSK Screw 32mm</div> <div>28pcs</div>		
<div>O</div> <div></div> <div>Flat Washers</div> <div>8pcs</div>		
<div>P</div> <div></div> <div>Small Adjuster</div> <div>4pcs</div>		
	<div>Step 4 : Attach the side rail leg (E) to the side rail (C).</div> <div></div>	

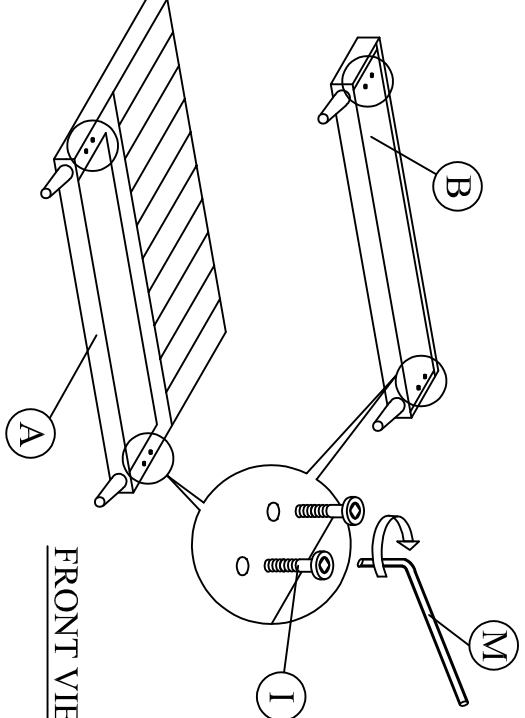Step 5 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

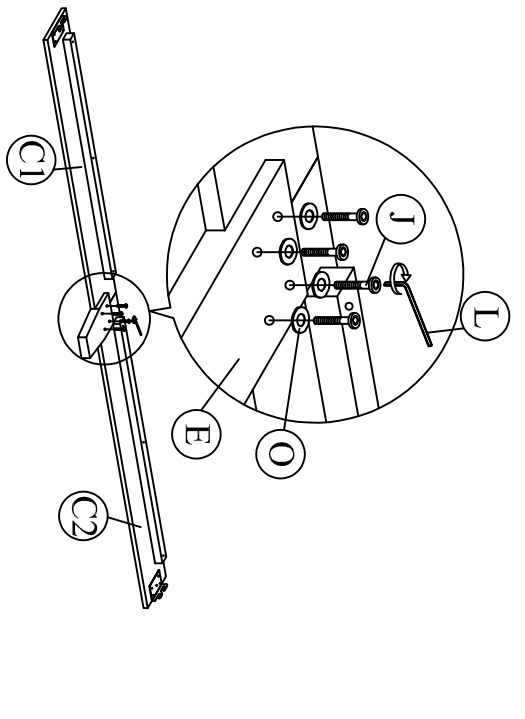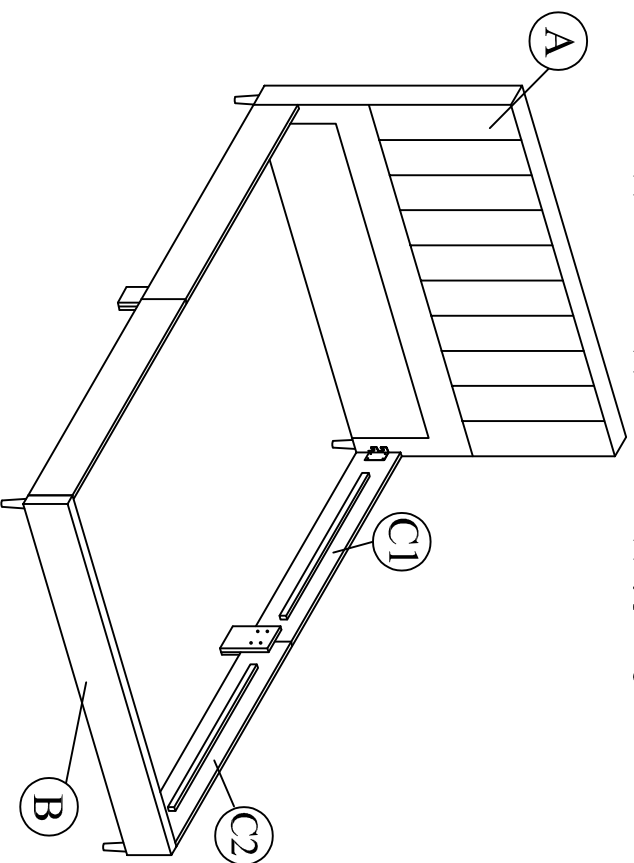

Step 6 : Attach the support legs (H) to the slats (G) and center rail (F).

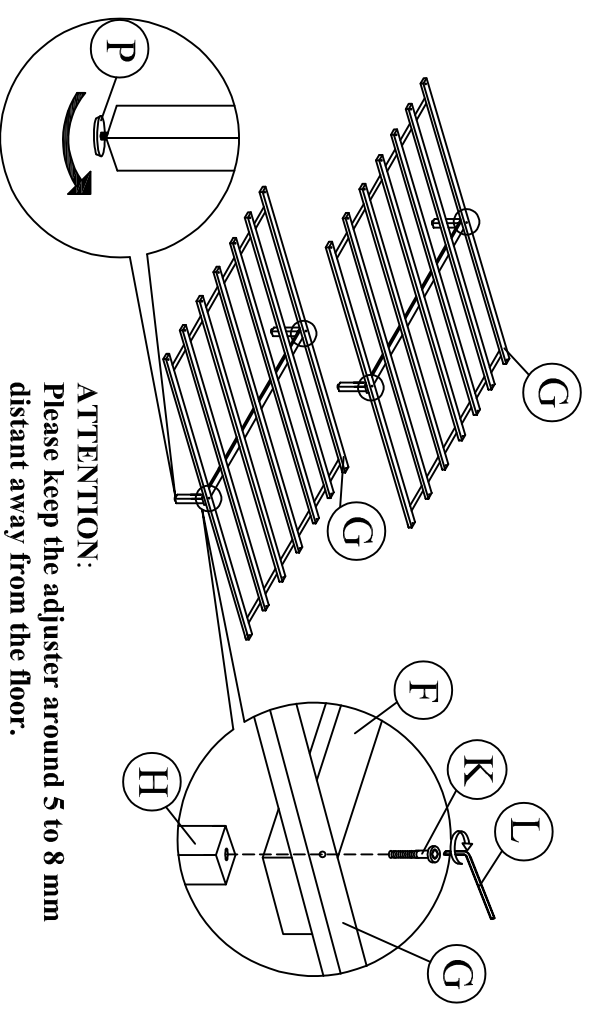

ATTENTION:
Please keep the adjuster around 5 to 8 mm
distant away from the floor.

Step 7 : Tighten the 4 Corner with Allen Key (M). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

