













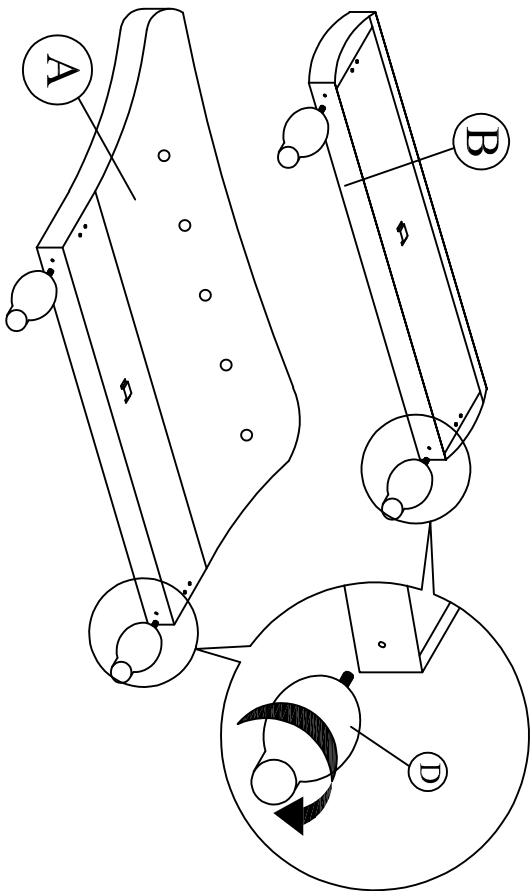


ASSEMBLY INSTRUCTION


MODEL : CF 9167 (5'6")

A		1 pc
B		1 pc
C		2 pcs
D		4 pcs
E		1 pc
F		2 pcs
G		1 pc
H		31 pcs
I		2 pcs
J		1 pc
K		1 pc
L		2 pcs
M		2 pcs
N		8 pcs


Step 1 : Install the legs (D) to footboard (B) and headboard (A).




Step 2 : Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it.

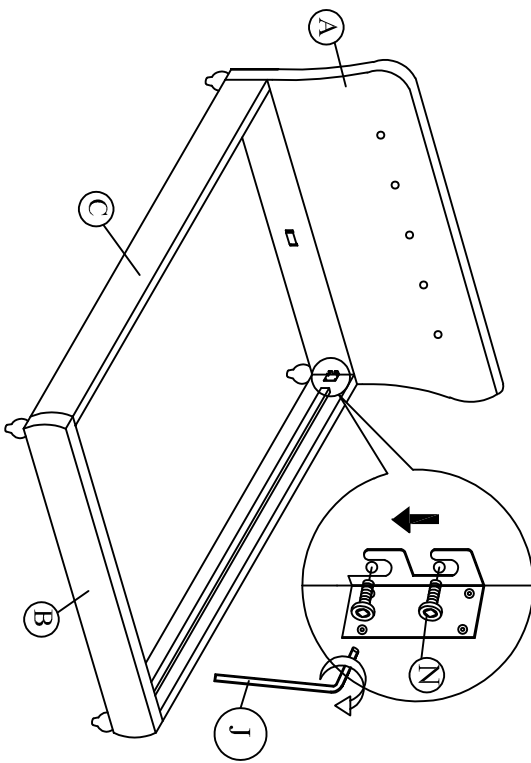

Step 3 : Attach the support legs (F) to the center rail (E) of the bed as shown.

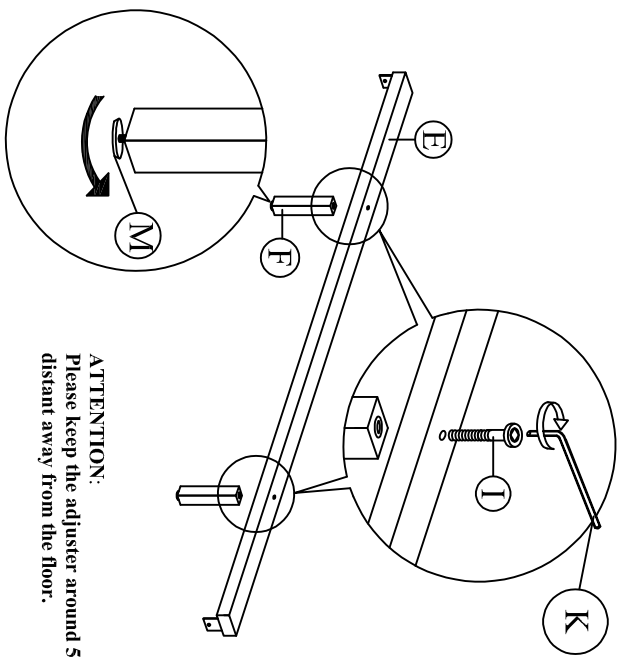

Step 4 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (L) using screw driver (not included) to the headboard (A) and footboard (B).

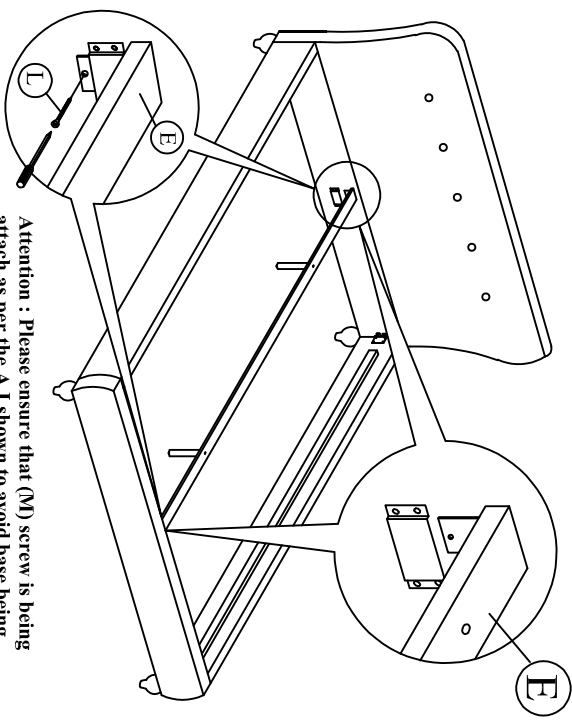

ATTENTION:
Please keep the adjuster around 5 to 8 mm distant away from the floor.

Attention : Please ensure that (M) screw is being attach as per the A.I shown to avoid base being collapse .

Step 5 : Affix the slat (G) to the side rail support wood and the center rail (E). Tighten all the 4 corner.

