
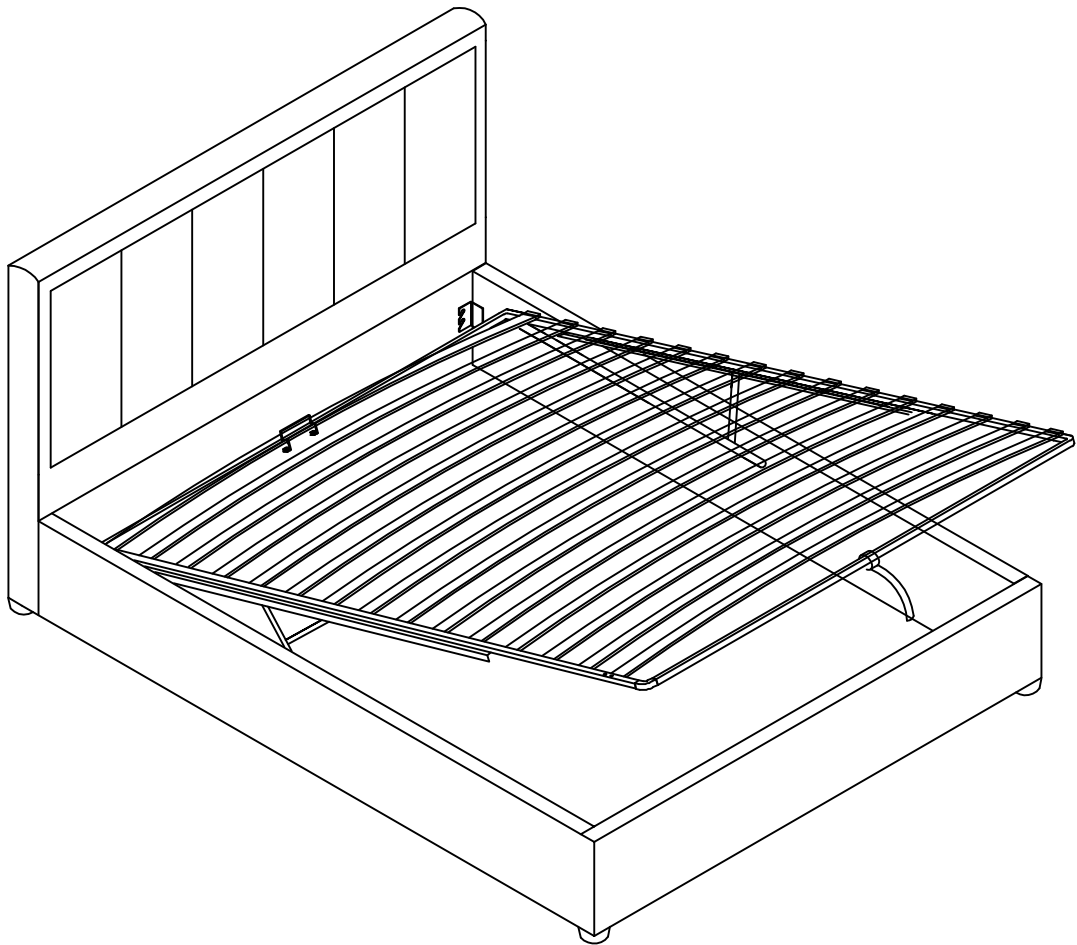
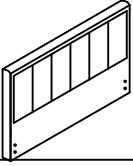
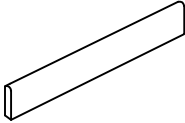
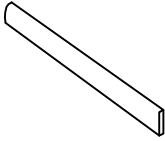
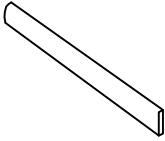



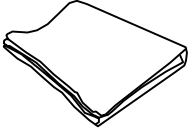







ASSEMBLY INSTRUCTIONS




Parts List

A HEAD BOARD 1PC 	B FOOT BOARD 1PC 	C SIDE RAIL 1PCS 	D SIDE RAIL 1PCS 
E BEDSTEAD RAIL 2 SETS 	F SLAT 15 PCS 	G Single Plastic Cap 30pcs 	H Digging rope 1PC 
I LEG 4 PCS 	J 4 PCS 	K BEDSTEAD RAIL 2 SETS 	L 2 pcs 
M Non-woven fabrics 1pc 	N 1 PCS 		

Hardware List


1 M8*30 x16PCS 	2 M8*40 x 6 PCS 	3 6 pcs 	4 8 pcs 
5 8 pcs 	6 M5 x1 PC 	7 1 pcs 	8 1 pcs 
9 M4*40 x4 PCS 			

Step1

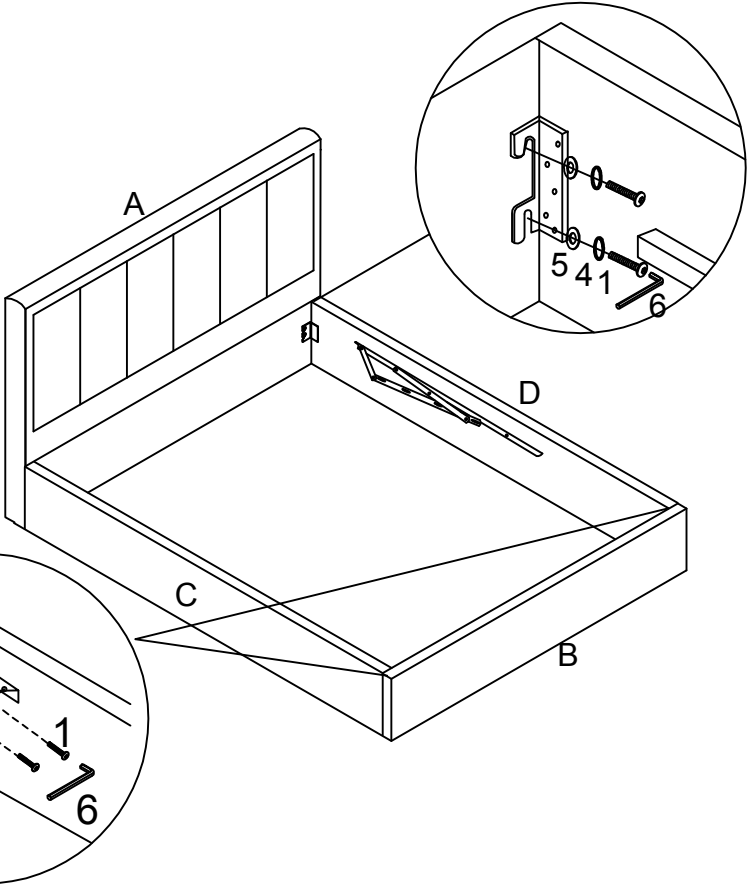


5.x8	
6.x8	
L.x2	
6.x1	
1.x16	

Step2

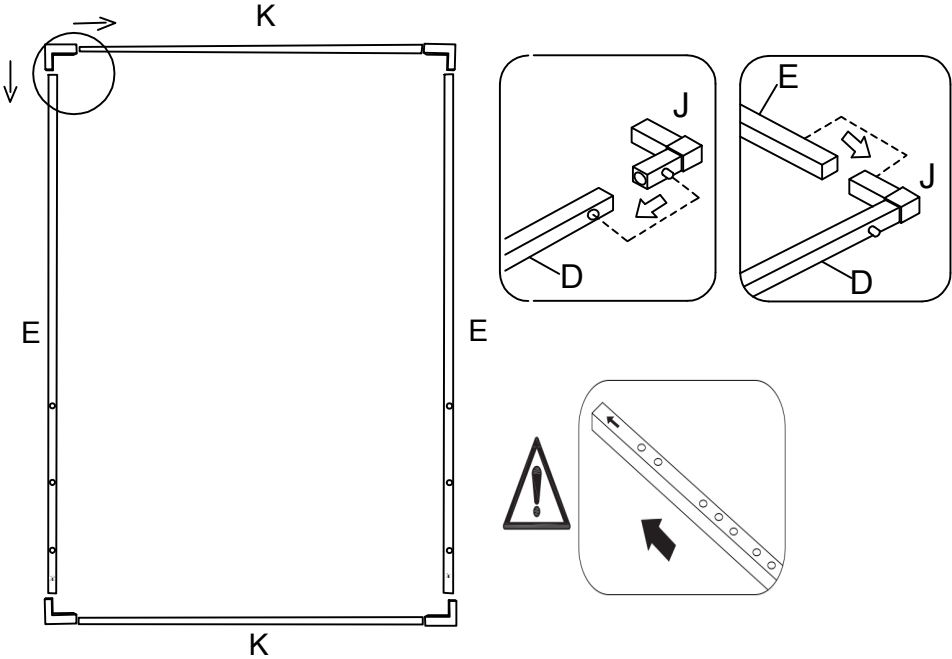

J.x4	
------	--


Step3

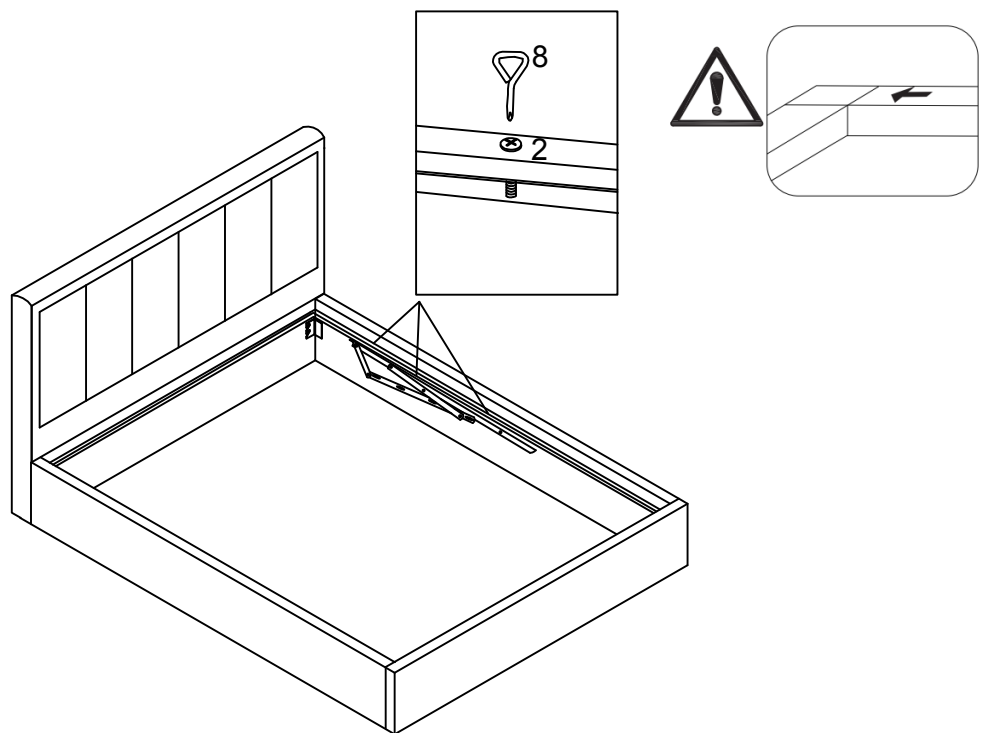


2.x6




8.x1



Step4

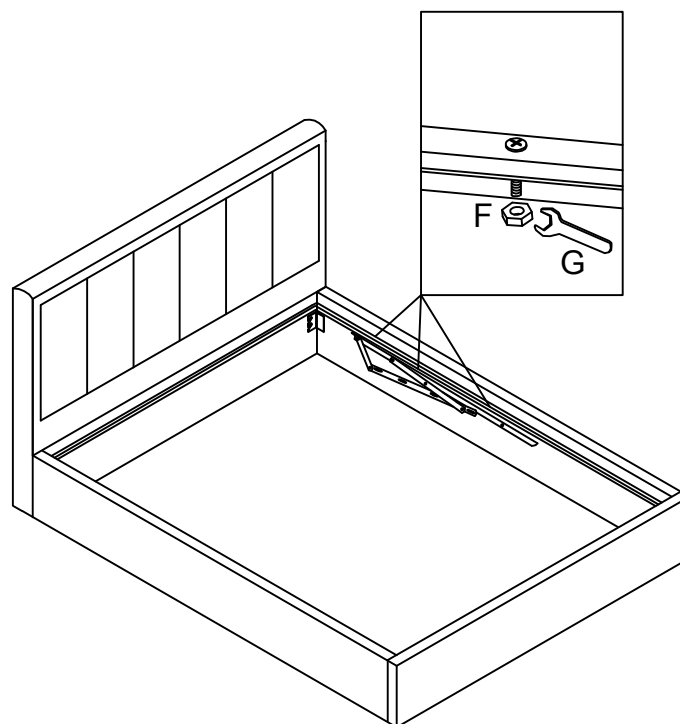


7.x1




3.x6




Step5

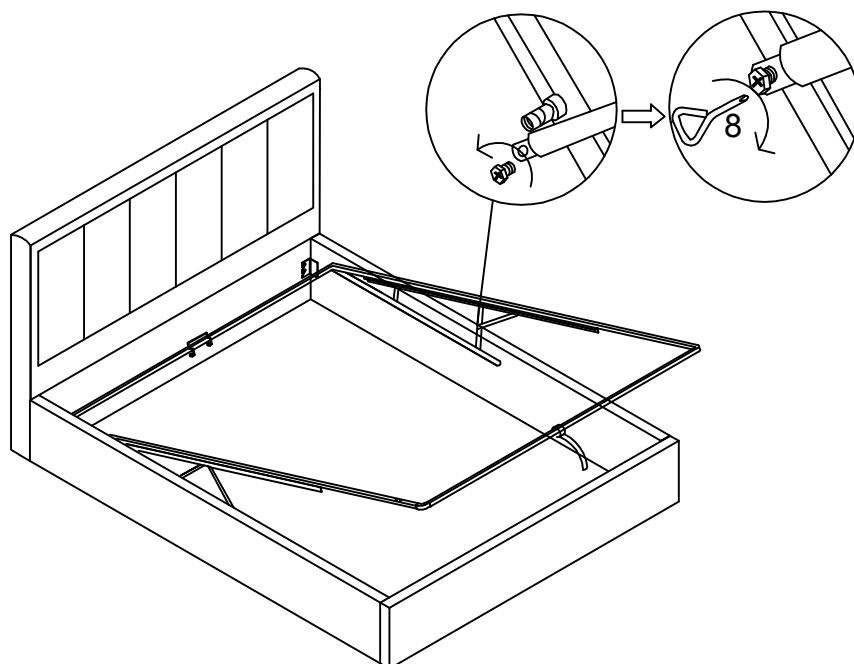

8.x1



Step6

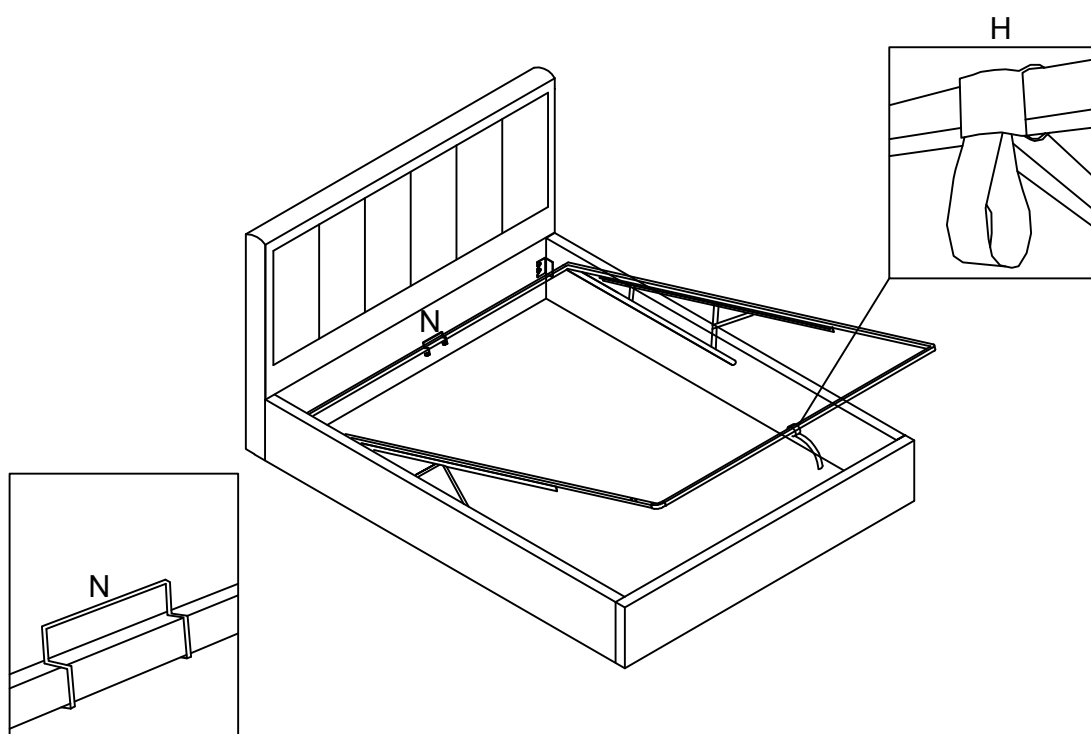


H.x1



N.x1





Step7

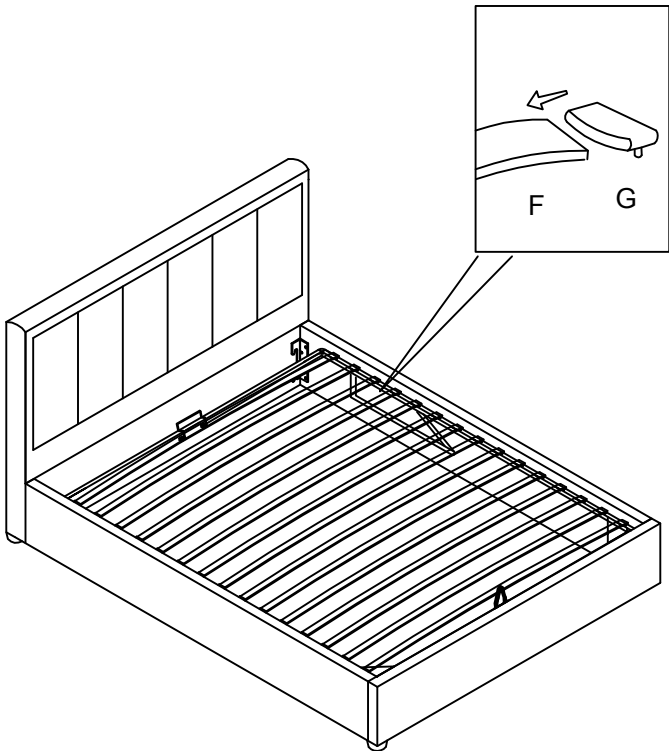


F.x15	
G.x30	

Step8

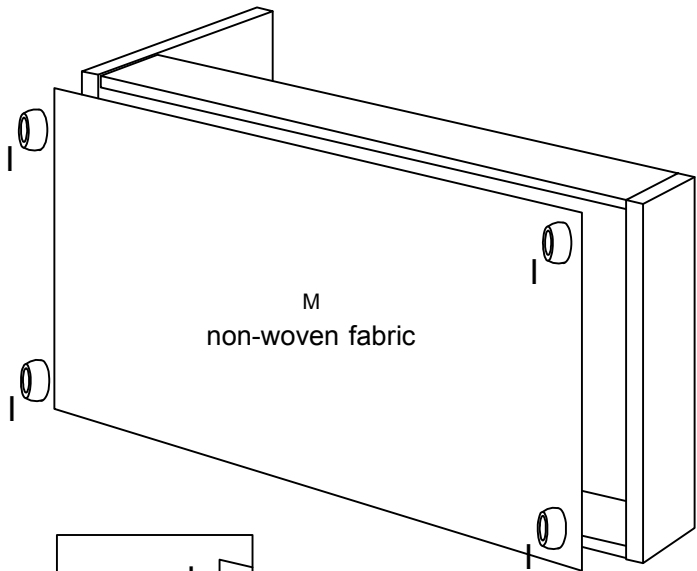

9.x4	
M.x1	
I.x4	
8.x1	

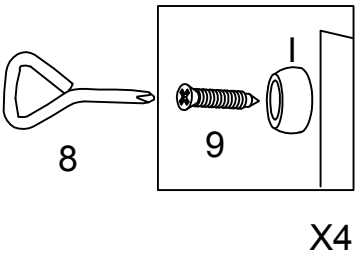

Stick the non-woven fabric on bottom and then assemble the 4 foot

Page 6 of 6